



# WE ARE PROUD TO PRESENT THE RALLYDASH TRIPMASTER 5

RallyDash Tripmaster 5 is one of the most simple and reliable tripmasters available. It is easy to operate and offers you the information you need while you are competing. This manual guides you through the installation and operation of the RallyDash Tripmaster 5.



RallyDash is owned and operated by motorsport professionals and enthousiasts, involved in off-road, cross country rally raid, rally and historic auto- and motorsport. Winning requires faultless equipment, which does what it needs to do and can cope with the conditions. RallyDash offers high quality products that excel in simplicity and reliability, so you can focus on the sport.

#### **○ RELIABLE**

The RallyDash Tripmaster 5 works in almost all circumstances.

Thanks to its rugged aluminum housing, fully sealed electronics and waterproof connectors it copes with water, dirt, heat and cold. The internal rechargeable battery makes sure that you can follow your roadbook to the finish, even if the external power supply fails. Indicators on the battery condition, sensor performance and GPS connection give you continuous information on the operation of the RallyDash Tripmaster 5, which keeps you in control at all times.



#### **⇒** ACCURATE

GPS or sensor: the RallyDash Tripmaster 5 can be configured to several inputs and automatically switches between them to guarantee continuous operation. The wheel circumference can be set in millimetres and is adjustable while driving. The GPS distance measurement can be set in percentage and is adjustable while driving. The distance in trip and stage mode can also be set to a resolution of 10 meters or 100 meters, to match the roadbook.



## TRIPMASTER 5

#### **○ CLEAR**

Readability is key in rough conditions and at high speeds. The high contrast display, adjustable backlight and large font make the RallyDash Tripmaster 5 easy to read in every situation. Even in dusty conditions with dark, bright, or changing sunlight conditions, you can always read your RallyDash Tripmaster 5.

## **⇒** EASY

The menu interface of the RallyDash Tripmaster 5 offers 6 modes, including trip, stage, cap, speed, time and setup. Even on your first event after a long winter, you will find it easy to operate. Zeroing, adjusting distance, switching from trip or stage to speed or CAP is so fast that it can be easily done while driving.



- ➤ Works with wheel sensor for distance measurement
- ➤ GPS device connection for CAP and distance measurement
- ➤ Internal backup battery: no battery replacement needed
- ➤ Menu items:
  - → Trip distance (overall distance)
  - → Stage distance (between tulips)
  - → Speed (actual, maximum and average)
  - → Time of day
  - → Course over ground \*
  - → GPS distance \*
- \* Available when the RallyDash GPS receiver and Powerbox are connected.

## **○ VERSATILE**

RallyDash Tripmaster 5 has 6 modes: trip, stage, speed, course-over-ground, time and setup. These modes can be selected through the remote control.

- TRIP-MODE gives you the total trip distance and trip time. The distance is adjustable with the plus and minus buttons on the remote and can easily be zeroed.
- **2 STAGE-MODE** allows you to zero the distance with one click. The stage number is incremented or decremented automatically, allowing you to keep track of the tulips in the roadbook.
- **SPEED-MODE** displays the current, maximum and average trip speed.
- **© COURSE-OVER-GROUND-MODE,** or CAP, displays your (true) heading when a compatible GPS receiver is connected.
- **TIME-MODE** makes sure you have your rally time of the day available at all times.
- **© SETUP-MODE** allows you to configure the RallyDash Tripmaster 5 on the fly, and gives you basic diagnostic info.











## **SPECIFICATIONS**

**Dimensions** 80x46x22 mm **Weight** 170 g

Housing

→ Material Aluminium

→ IP rating IP67 (Ingress Protection)

Display

→ Type High contrast

graphical LCD

→ Resolution 132×32 pixels

→ Dimension 51×15 mm

**Backlight** White LED

**Font** Optimized 9 mm

and 13 mm

**Power** 

→ Input voltage 9-15 VDC

→ Input current 0.09 A (Maximum)
→ Protection Reversed voltage

and load dump

**Backup battery** 

→ Charge time < 3 hours

→ Operating time > 3 hours

Connectors

→ IP rating IP67 → Size 8 mm

**Connections** 

→ Number of connections 3

→ Functions

red Power and GPS receiver

yellow Sensor blue Remote

**GPS** receiver input

Protocol NMEA 0183 Interface RS232 Transfer rate 4800, 8, n, 1

**Control** Menu driven

Modes Trip, Stage, Speed,

Course over ground (COG), Time and Setup

CONTACT



**Correspondence Address** 

Garderbroekerweg 209, 3774 JE Kootwijkerbroek

visiting address

Aalsvoort 51a, 7241 MA Lochem (by appointment only)

**Tel** (+31) 655 392 335 \* **Email** info@rallydash.nl \*\*

\* Available on workdays from 9 a.m. to 6 p.m.

\*\* Response by email usually within 1 day.

KvK 76465772 Bank Rabobank NL76 RABO 0347979300 BTW NL86 0632866 B01

MORE INFO? RALLYDASH.NL





TRIPMASTER 5



## **ACCESSORIES**

RallyDash offers several accessories to tailor the RallyDash Tripmaster 5 to different situations.

They can be bought separate or as part of a kit in our webshop.

### **⇒** SENSORS

→ Wheel sensor
cable:
the strongest
and most reliable
sensor for your
RallyDash Tripmaster
5, works everywhere.





† **GPS:** Accurate and fast distance and CAP reading, to be used as main input or together with the RallyDash wheel sensor. RallyDash offers the RallyDash GPS Receiver and Powerbox as a foolproof solution.

### **⇒** REMOTE CONTROL



† Remote control: Three button remote control for complete control of your tripmaster.

Roadbook remote: Two extra buttons for your roadbook, which can be combined with the RallyDash Remote control.





## **⇒** POWER

→ Powerbox:
Powersupply
for your
RallyDash
Tripmaster 5,
CAP repeater,
Roadbook and
GPS sensor.





† **Powercable:** connect the RallyDash Tripmaster 5 to a 9-15 VDC source.

Accessories are subject to change

**↓ Powercable:** extension.





## **○ ONLY THE**TRIPMASTER

Buy a tripmaster and choose your setup with the accessories from our webshop or add it as a second tripmaster to one of our kits. To function as a standalone unit, the tripmaster needs minimum a power cable, a remote and a sensor or GPS receiver.

• RallyDash Tripmaster 5

## **⇒** BASIC NAVIGATION SET

The basic kit for a functional tripmaster with all our reliable accessories for proper operation. Without GPS receiver or CAP heading.

- RallyDash Tripmaster 5
- **©** Power cable (3A)
- Tripmaster remote
- **6** Sensor cable



**KITS** 

